

Due to V Expressions LTD's deep modeling, which can include editing of pitches, sweeps, & decays, attempting to assign your own user samples can result in radical changes in timing & pitch.

To correct these issues when assigning user samples to our modeled inputs, please follow these easy steps below.

Step 1: Follow Roland's steps 1 through 6.

Step 2: Select "Advanced".

Step 3: Set "Pitch" & "Pitch Seep" to "0".

Step 4: Set "Decay" to "100".

Step 5: Continue with Roland's 7th step.


Step 6: Save your backup.

Your assigned user sample should now play with proper pitch, length, & decay.

- V Expressions LTD

## Assigning a User Sample to an Instrument and Playing It

1. Press the [INSTRUMENT] button.
2. Press the PAGE [UP] button to access page 1 (INSTRUMENT).
3. Press the [F1] (INST) button.

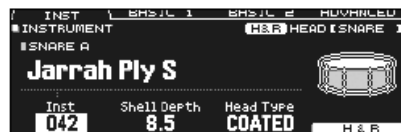

4. Select the pad that you want to edit (p. 20).
5. Move the cursor to the instrument group, and use the [-] [+] buttons or the dial to select "USER SAMPLE."



6. Turn the [R1] knob to select a user sample.
  - \* Only the parameters of the INSTRUMENT screen (ADVANCED tab) can be edited for an instrument to which a user sample is assigned.
7. Press the [KIT] button to return to the DRUM KIT screen.

When you strike a pad to which the user sample is assigned, you hear that user sample.

### MEMO

- You can assign a user sample to the instrument of each pad, and make mute group settings (p. 26) so that you can switch between user samples by striking the pads.
- You can also assign a user sample to a sub-instrument.